Attaching Audioshoes and Receivers to Hearing Aids

Scan code for video instructions




The receivers allow the microphone to "talk" to the hearing aids.



STEP 1: Attach Receiver to Audioshoe

- Match up the three prongs on the receiver to the three holes in the bottom of the audioshoe.

- Push until you hear a click.

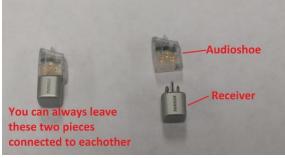



Step 2: Open the Battery Door



Step 3: Line up the notch on the audioshoe with the track on the hearing aid.



Step 4: Push the audioshoe in until it clicks into place.



Step 5: Close the battery door and make sure you hear another click.

In the morning, put the audioshoe/receiver on the hearing aid. At the end of the school day, remove the audioshoe/receiver from the aid. Store receivers in a safe place.